


CLEAR HANGING WINDOW PLANT SHELVES

PRODUCT MANUAL

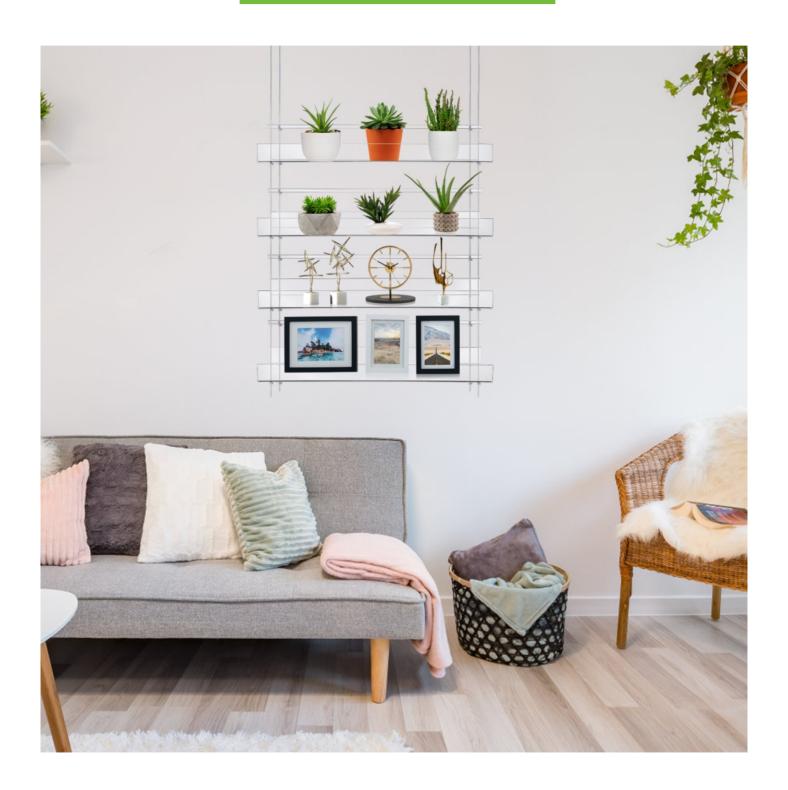

Method 1 ——Shelf facing up Acrylic stick





1.Align the four steel slings end to end. Determine the position of each layer flowers shelves,and mark them with a pen.



2.Thread the wire through the cylindrical screw ${f f}$ tting. And then tightenthe screws with a screwdriver.




3. Tear off the protective \boldsymbol{f} lm from the transparent plate



4.Pass the four steel wires through the transparent plate.(According to the installation way you choose)



5.Thread the two front wire through the cylindrical screw ${\bf f}$ tting.And tightenthe screws as well.

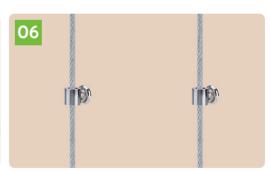

6.Thread the two front wire through the cylindrical screw **f** tting.And tightenthe screws as well.



7.Adjust the positioning accessories of the front two steel ropes to the same height.



8.Pass the two front steel wires through the transparent stick to act as a barrier.



9.To add a new layer, use the same method as above.

Method 2 —— Shelf facing downwards Acrylic stick



Method 3 —— Shelf facing up

